











Asset Web Map User Help Guide

Background




The AssetMap application enables South East Water clients to find asset data within the South East Water boundary. The application aids the user in finding data by providing a simple Address, Melway and Coordinate search for clients.

The application can also call up attributes for various assets when the user clicks on them. The application also provides some basic navigation tools like zoom and pan along with tools for measuring and printing.





1. Map Control Tools

	Home	Displays the overview map
	Refresh	Refresh's Map view
	Fit	Fit to the last query
	Pan	Pan around Map
	Map Centre	Centre map on Selected location.
	Zoom Area	Zooms to selected area
	Zoom In	Zooms in
	Zoom Out	Zooms Out
	Change Scale	Change map to selected scale
	Pan Buttons	Pan map in selected direction.



2. Measuring Tools

	Co-Ordinate Read Out	Select point on map and readout displayed in status bar at the bottom on the web browser.
	Distance	Measure the distance between points on the map.
	Area	Measure an area by selecting points on the map.


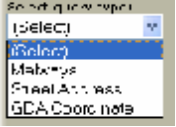


3. Printing


	Copy to Clipboard	Allows the user to copy a section of map to clipboard.
	Save Map	Allows the user to save the map as an image file.
	Print Black & White	Prints the current view in black & white
	Print Color	Prints the current view in colour

4. Help

	Help Guide	Refers to this document
	Exit	Exits user from WebMap

5. Queries

		Select Queries tool to display queries available. Select from the following query types, 1. Melways, 2. Street Address, 3. GDA Co-ordinates
1 Melway		The user enters the Melways grid as shown
2 Street Address		Enter the St Number or Lot Number, St name and St type then click search
		Select the show map on the property they wish

		to view.
3 GDA Co-Ordinates		Enter GDA94 Co-Ordinates and select the required zoom.

6. Feature displays

<input type="radio"/> All Features <input type="radio"/> Sewer <input type="radio"/> Water	All Assets	Display's Sewer & Water Assets
<input type="radio"/> All Features <input checked="" type="radio"/> Sewer <input type="radio"/> Water	Sewer Assets	Display's Sewer Assets
<input type="radio"/> All Features <input type="radio"/> Sewer <input checked="" type="radio"/> Water	Water Assets	Display's Water Assets

7. Right mouse button displays

Refresh	Refreshes map window
Fit All	Fits all to the current view
Zoom Box	User selects two diagonal points to zoom in
Zoom In	Zooms in random
Zoom Out	Zooms out
Magnifier	Magnifier box appears as user runs mouse over map
Text Magnification	Magnifies text as cursor moves over map
Pan	Moves existing map view
Redline	Red lining tools
Copy to clip board	Copy existing view to clipboard
Print	Prints current view
Save	Saves view as *.cgm
About	About active CGM